



	A	B	C	D	E	F	G	H	L	M	N	P	R	S	T	Z
FWV+FWL 01+15+02	774	226	498	51	458	163	263	149	198	187	335	99	486	208	198	246
FWV+FWL 25+03	987	226	708	51	458	163	263	149	198	187	335	99	486	208	198	246
FWV+FWL 35+04+06	1194	226	918	51	458	163	263	149	198	187	335	99	486	208	198	246
FWV+FWL 08+10	1404	251	1128	48	497	185	259	155	220	195	348	120	478	234	208	271

**LEGENDA**

- 1. Clear space for hydraulic connections (\*)
- 2. Slots for wall/ceiling mounting 9 x 20 mm
- 3. Clear space for electric connections(\*)
- 4. Hydraulic connections (4DF = 4 pipe system)
- 5. Condensate drainage for vertical installation
- 6. Air outlet for concealed models
- 7. Air suction for concealed models
- 8. Condensate draining for horizontal installation
- 9. Air outlet
- 10. Air inlet

(\*) indications applicable to units with hydraulic connections on the left side; in case of right side connections the indications for "clear space" are reversed.

**Hydraulic connections**

**Standard Heat exchanger : connection female**

FW01	FW15	FW02	FW25	FW03	FW35	FW04	FW06	FW08	FW10
1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	3/4"	3/4"

**Additional Heat exchanger : connection female**

FW01	FW15	FW02	FW25	FW03	FW35	FW04	FW06	FW08	FW10
1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"