

Minimum required installation space

Keep at least 100 mm of free space at air inlet for a proper air suction and an easy removal of the filter.
For ducted units the outlet/inlet grill surface must be at least equal to the outlet/inlet surface of the unit to avoid extra noise and strong performances reduction.

Legenda

- 1 Clear space for hydraulic connections(*)
- 2 Slots for wall/ceiling mounting 9 x 20 mm
- 3 Clear space for electric connections(*)
- 4 Hydraulic connections (4 DF = 4 pipe system)
- 5 Condensate drainage for vertical installation
- 6 Air outlet for concealed models
- 7 Air suction for concealed models
- 8 Condensate draining for horizontal installation
- 9 Air outlet
- 10 Air inlet

(*) Indications applicable to units with hydraulic connections on the left side; in case of right side connections the indications for "clear space" are reversed.

Hydraulic connections

Standard Heat exchanger: connection female

FW02	FW03	FW06	FW08
1/2"	1/2"	1/2"	3/4"

Additional Heat exchanger: connection female

FW02	FW03	FW06	FW08
1/2"	1/2"	1/2"	1/2"