

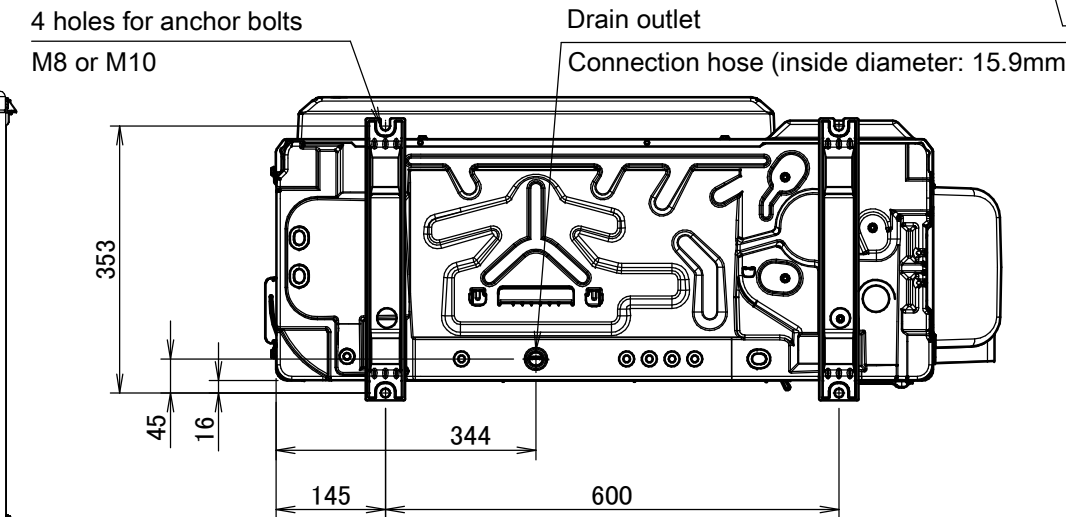


In case of removing the stop valve cover.

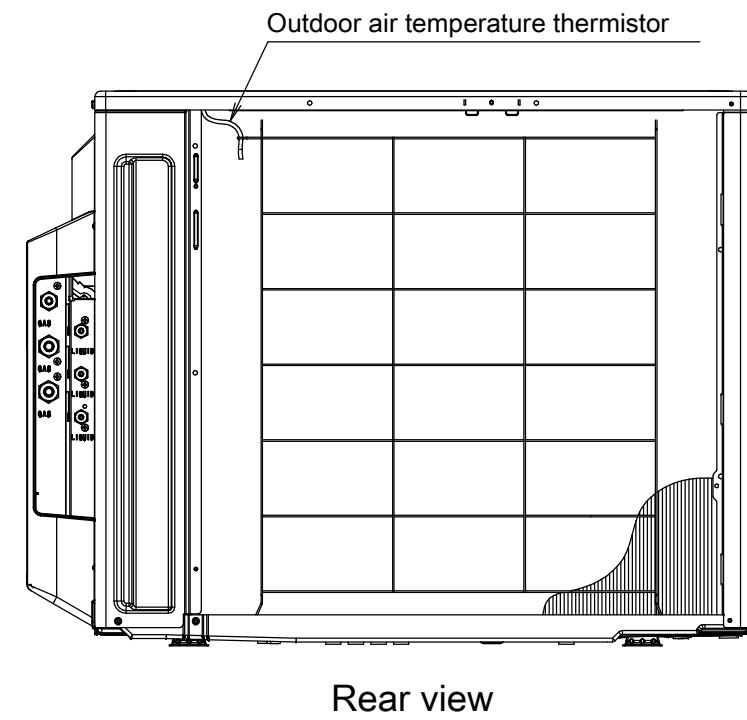

Minimum space for air passage

Bottom view

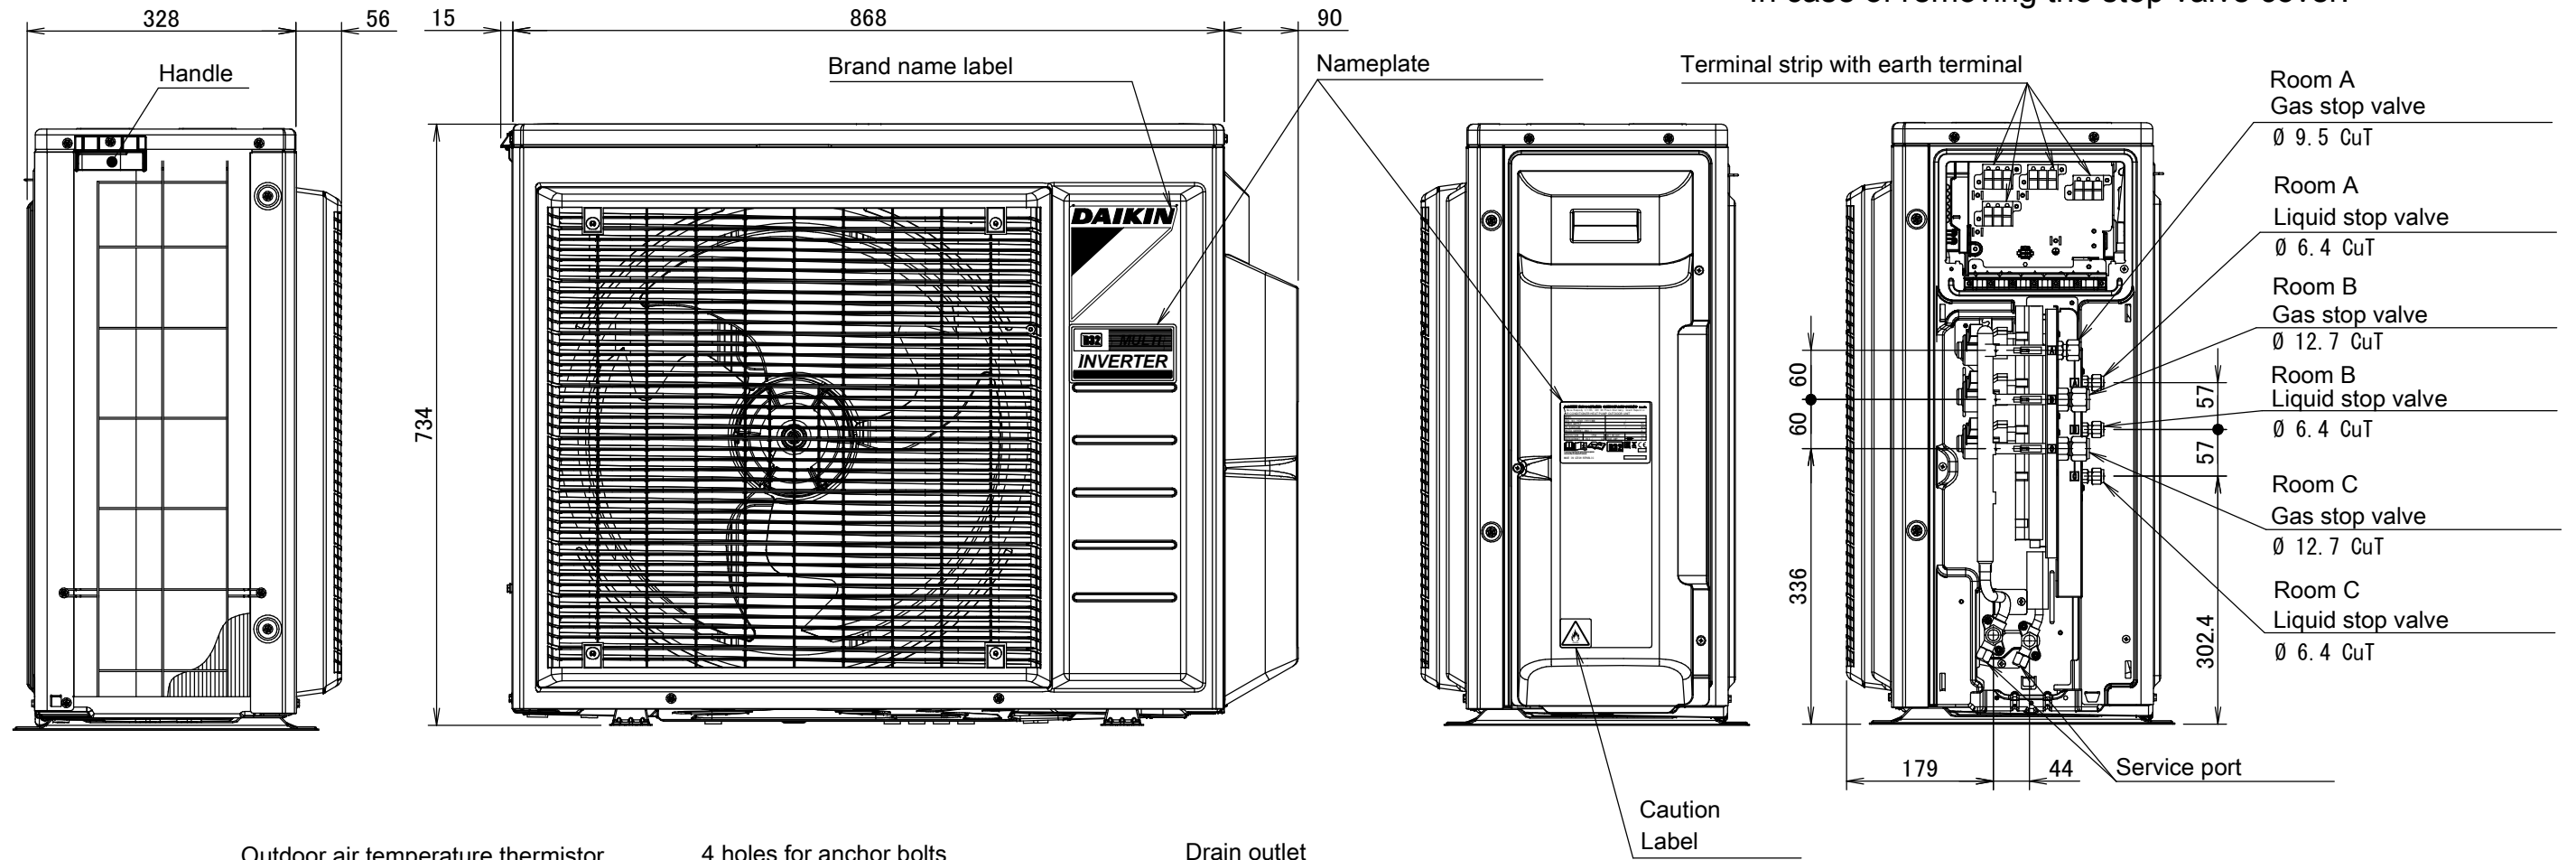