
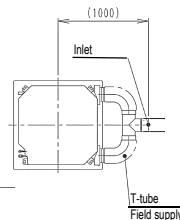


Ventilation resistance in chamber (note 6)

Nr	Name	Description
1	Indoor unit	
2	Decoration panel	
3	Suction chamber	
4	Connecting chamber (Right)	
5	Connecting chamber (Left)	

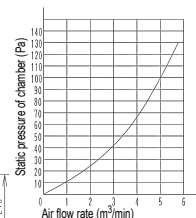

**NOTES**

- When installing this kit, inspection hatch is necessary. (It is necessary when servicing.) Either one of inspection hatches must be installed.
- Field construction.
- The corner air outlet of this part must be shut.
- In case of mounting a duct fan, make sure to use a wiring adapter for electrical appendices and link with the indoor unit fan.

(\*) In case a discharge opening is closed with the 'sealing member' option, the distance of 1500 mm can be reduced to 500 mm on the closed side.

- The intake air flow rate is recommended to be 20% or less of the H speed air flow rate. If the intake air flow rate is too large, the operating sound may rise or detection of the indoor unit suction temperature may be affected.
- It indicates the distance between the T-tube inlet and the indoor unit inlet when the T-tube is connected.