



The mark (→) shows piping direction

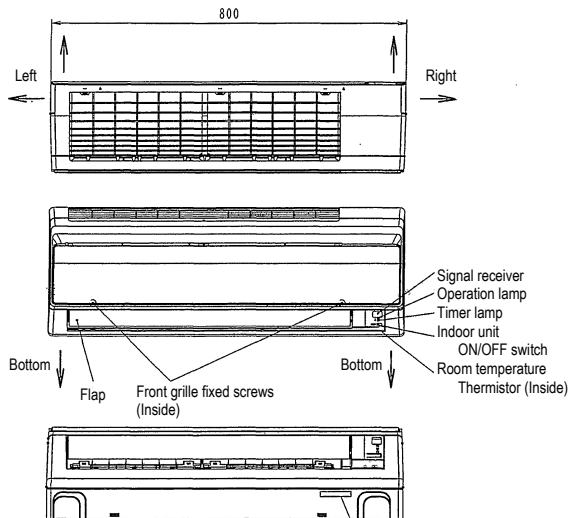


Model name Plate

FLAP AND LOUVER ANGLE

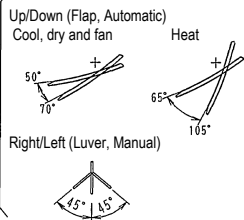


Signal transmitter



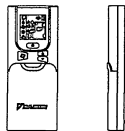


INFRARED REMOTE CONTROL
ARC461A1

(Including mounting plate)

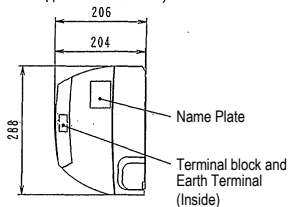

→ Air flow
(Indoor)

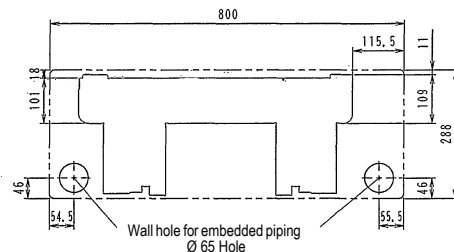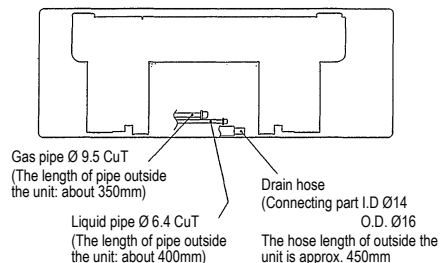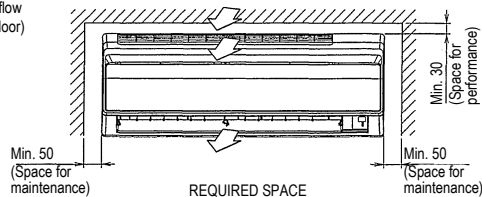

STANDARD LOCATIONS OF WALL HOLES