

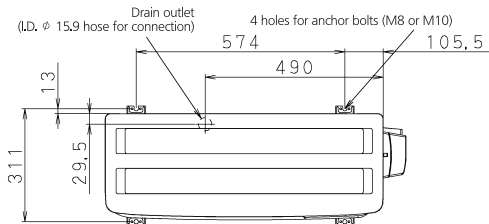
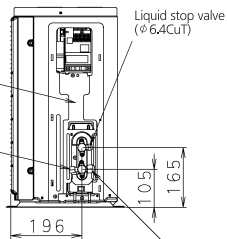
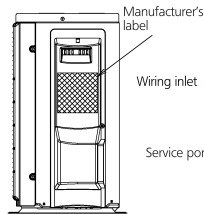


RXS25-42J

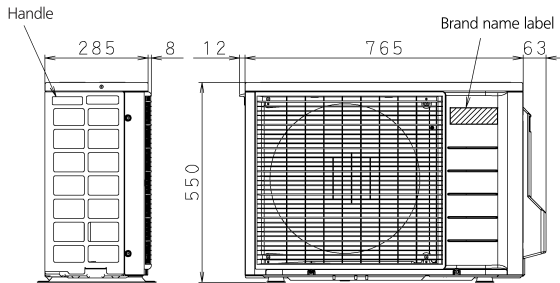

Minimum space for air passage

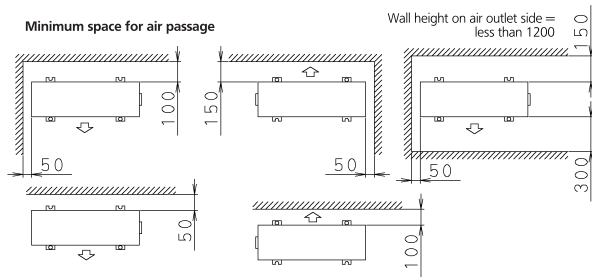

In case of removing stop valve cover

Gas stop valve (ϕ 9.5CuT)

