

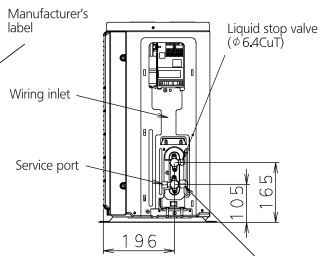
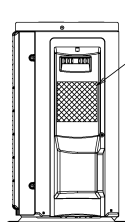
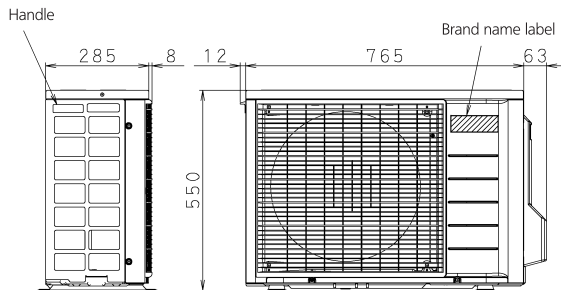
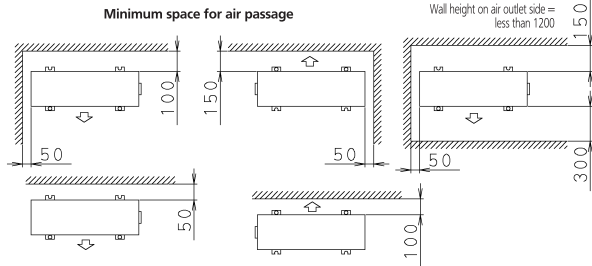


RXS42L

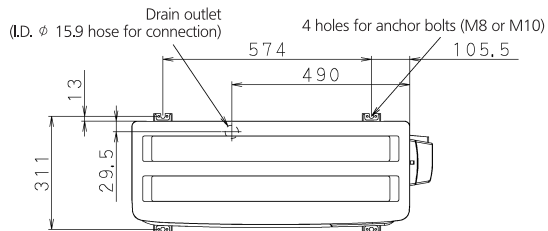

In case of removing stop valve cover

Gas stop valve (ϕ 9.5CuT)

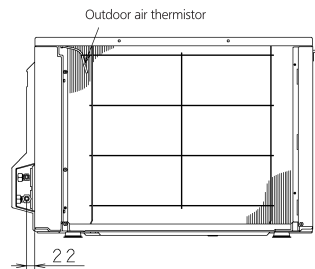

3D055546H