


VKM80GBM

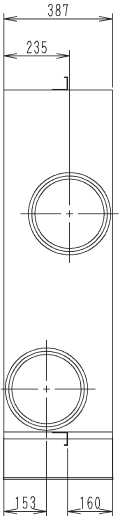

Supply air fan Damper plate Direct expansion coil Feed water tank Hanger bracket 4-14x40 oval hole



Exhaust air fan

EA ← Exhaust air to outdoors

OA → Fresh air from outdoors (Outdoor air)

← RA Return air from room

→ SA Supply air from room

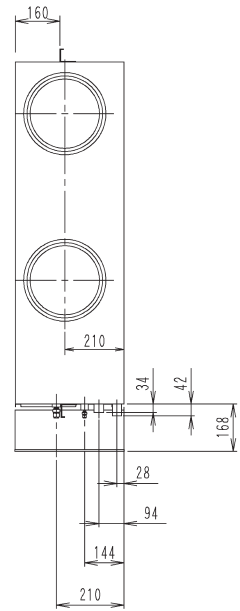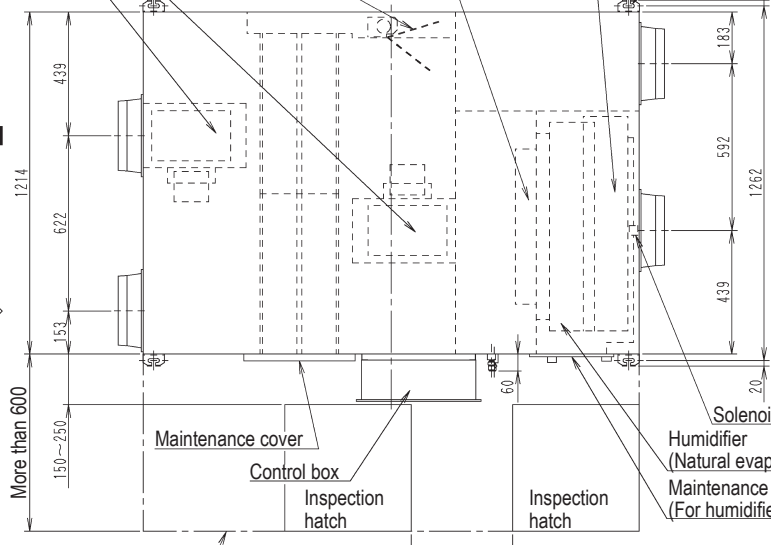

Maintenance space for the heat exchanger elements the air filters, fans and humidifier

360 (In case of □450 inspection hatch)
140 (In case of □600 inspection hatch)



Heat exchanger elements Gas pipe connection (ø12.7) Feed water connection port (ø6.4C1220T)

Air filters Liquid pipe connection (ø6.4) Drain outlet (PT3/4 male screw)

- × The specification subject to change without notice.
- × Be sure to provide two inspection hatch. (□450 or □600) at the service side of filters and elements.