

Remote switching of operation mode

Unit remotely locked. Switching ON/OFF not possible

"Home leave" function activated

Weekly or schedule timer program activated

Current operation mode:
Heating / Cooling / Drying /
Fan (pure recirculating-air operation) /
Ventilation (VAM)

Air flow setting
Currently activated
fan speed:
Low / Medium / High

Operation mode of ventilation
(VAM)

Operation mode:


Following operation modes are available:

Heating / Cooling / Drying /
Fan (pure recirculating-air operation) /
Ventilation (VAM)

Fan speed / Air flow direction:

Selectable fan speeds (given by fan design):
Low, Medium, High

Air direction control

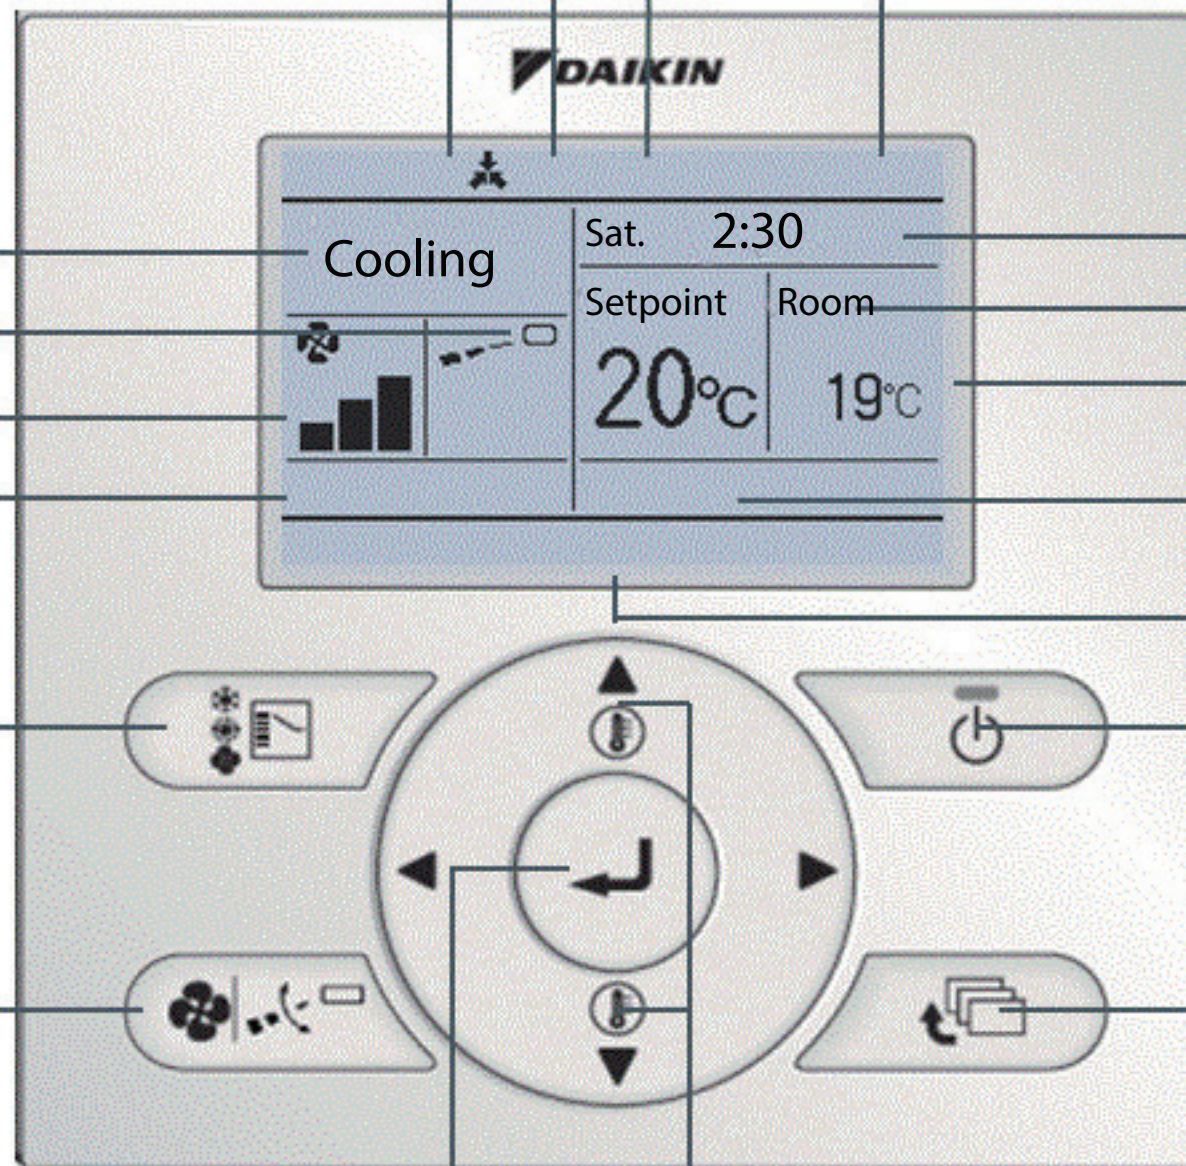

Key-lock activated: Press and hold ENTER key
for more than 5 seconds to deactivate

Current set-point
Detailed information display: Set-point / room
temperature or outdoor temperature

Defrost operation activated: The unit will
activate defrost operation automatically.
Duration: about 10 minutes

Message: System information is displayed

ON /OFF:
Switch unit ON/OFF.

This green LED lights steadily during operation of the unit.
In the case of an error, this green LED blinks.

Back

ENTER (menu key):
Open menu, and apply settings.

Temperature setting:
Set the desired room temperature.

Press and hold for more than 5 seconds to activate key-lock.
Press and hold again for more than 5 seconds to deactivate key-lock.

