





# OPERATION MANUAL

## Total Heat Exchanger HRV (Heat Reclaim Ventilation) (Ceiling mounted duct type)


VAM150FC  
VAM250FC

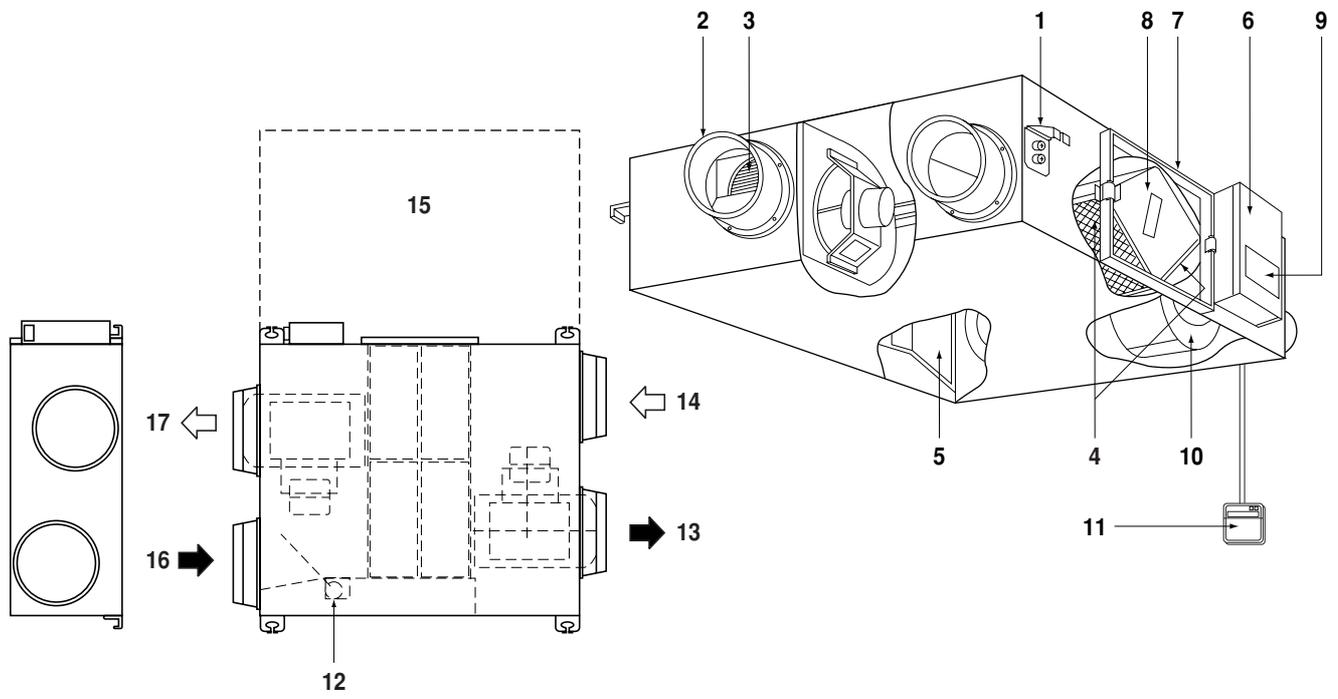

**1**

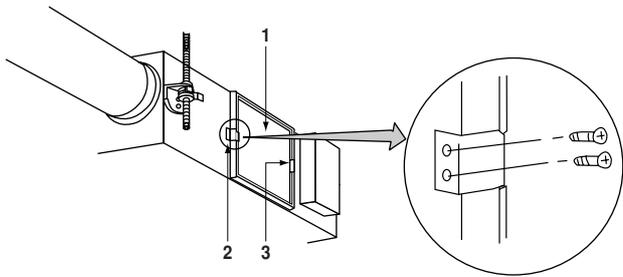


**2**

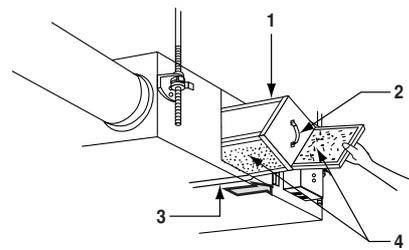


**3**



**4**

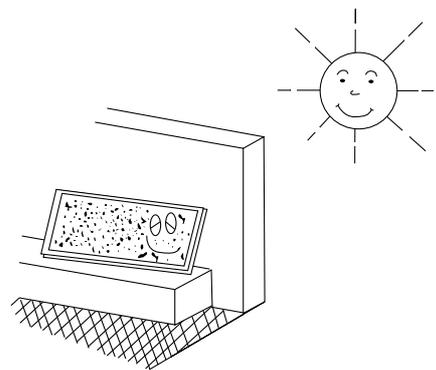

**5**

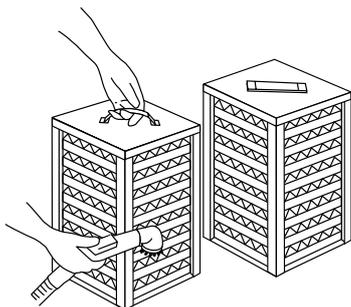

**6**

## CONTENTS

|                                  | Page |
|----------------------------------|------|
| Safety cautions .....            | 1    |
| Names of parts .....             | 2    |
| Operation .....                  | 2    |
| Maintenance .....                | 5    |
| Trouble and countermeasure ..... | 6    |
| Disposal requirements .....      | 6    |



### HRV – Heat Reclaim Ventilation

Before using the DAIKIN HRV, be sure to read this operation manual thoroughly. If you have any problems or there is a malfunction, please refer to this operation manual. Please keep this manual for your future reference whenever you do not understand how to use it when something is wrong with the unit during the operation.

## SAFETY CAUTIONS

Read the following cautions carefully and use your equipment properly.

There are safety cautions and tips listed here as follows:



### WARNING

Failure to follow these instructions properly may result in personal injury or loss of life.



### CAUTION

Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

### NOTE



These instructions will ensure proper use of the equipment.

Be sure to follow these important safety cautions.

Keep these warning sheets handy so that you can refer to them if needed.

Also, if this equipment is transferred to a new user, make sure to hand over this user's manual to the new user.



### WARNING + ELECTRIC SHOCK

- Before servicing the unit always shut off power, otherwise electric shock may occur.
- Never inspect or service the unit by yourself. Ask a qualified service person to perform this work.
- Always use the air filter. If the air filter is not used, heat exchange elements will be clogged, possibly causing poor performance and subsequent failure.
- Do not change operations suddenly. It can result not only in malfunction but also failure of switches or relays in the body.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use an HRV or an air suction/discharge grille in the following places:
  - Places such as machinery plants and chemical plants where gas, which contains noxious gas or corrosive components of materials such as acid, alkali, organic solvent and paint, is generated.
  - Places where combustible gas leakage is likely. Such gas can cause fire.
  - Places such as bathrooms subjected to moisture. Electric leak or electric shock and other failure can be caused.
  - Places subjected to high temperature or direct flame. Avoid a place where the temperature near the HRV unit and the air suction/discharge air grille exceeds 50°C. If the unit is used at high temperature, deformed air filter and heat exchange element or burned motor result. Unit ambient temperature conditions should be between -15°C and 50°C (80% relative humidity or less)
  - Places subjected to much carbon black. Carbon black attaches to air filter and heat exchange element, disabling them.

## NAMES OF PARTS

Refer to [figure 1](#)

- 1 Ceiling hook
- 2 Duct connection flange
- 3 Exhaust fan
- 4 Air filter (Long life filter)
- 5 Damper
- 6 Switch box
- 7 Maintenance cover
- 8 Heat exchange elements
- 9 Name plate
- 10 Air supply fan
- 11 Remote controller (Option parts)
- 12 Damper motor
- 13 EA (Exhaust air) (Exhaust air to outdoor)
- 14 OA (Outdoor air) (Fresh air from outdoor)
- 15 Maintenance space for the air filters, the heat exchange elements and Switch box
- 16 RA (Return air) (Exhaust air from room)
- 17 SA (Supply air) (Feed air to room)

## OPERATION


### Explanation for SYSTEMS

This product is operated differently depending on the system configuration.

For the operation of the remote controller for indoor unit and centralized controller, refer to the instruction manual provided with each unit.

### Operation for each system


#### Independent system

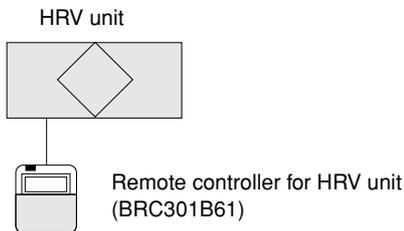

#### Operation method

The remote controller turns on and off HRV unit. (Refer to the section "Operation with the remote control exclusively for Air conditioning operation HRV units (BRC301B61)" on page 3)


#### Combined operation system with VRV systems and Sky-air series

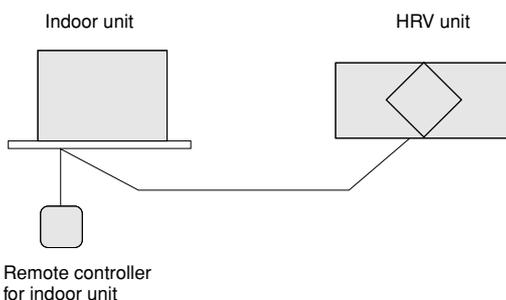

#### Operation method

The remote controller for VRV turns on and off the air conditioner and HRV unit.

If only the HRV unit is used without operating the air conditioner, set the unit in the "🏠" VENTILATION mode. (Refer to the section "Operating the HRV unit using the remote controller of the VRV-system air conditioner" on page 4)

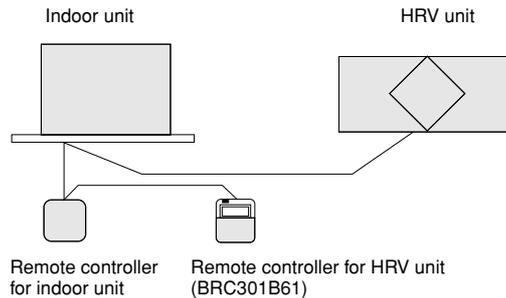

#### Operation method

The ON/OFF and timer operation can be performed using the HRV remote controllers.


(The indication of centralized control "🏠" appears on the display.)

Other operations can be performed using the HRV remote controllers.

Starting and stopping operations of the indoor unit and the HRV unit can be performed using the indoor remote controllers.

(Refer to the section "Operation with the remote control exclusively for Air conditioning operation HRV units (BRC301B61)" on page 3)

#### Centralized system

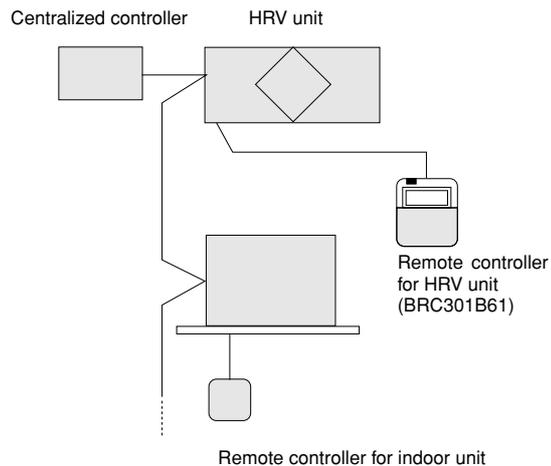

#### Operation method

When the HRV remote controllers is not connected, the Centralized controller controls the operation of the HRV unit. (Refer to the section "Independent operation of the HRV unit using the Centralized controller (DCS302B61)" on page 4)

When the HRV remote controllers is connected, operation can be started and stopped using the centralized controller or the indoor and the HRV remote controllers.


During the indication of centralized control "🏠" appears on the display, the ON/OFF and timer operation may not be possible with the HRV remote controllers.

Other operations can be performed using the HRV remote controllers. (Refer to the next sections)

## Operation with the remote control exclusively for Air conditioning operation HRV units (BRC301B61)

For non-independent systems, starting/stopping operation and timer operation may not be possible.

Use the air conditioner remote control or the Centralized controller in such cases.

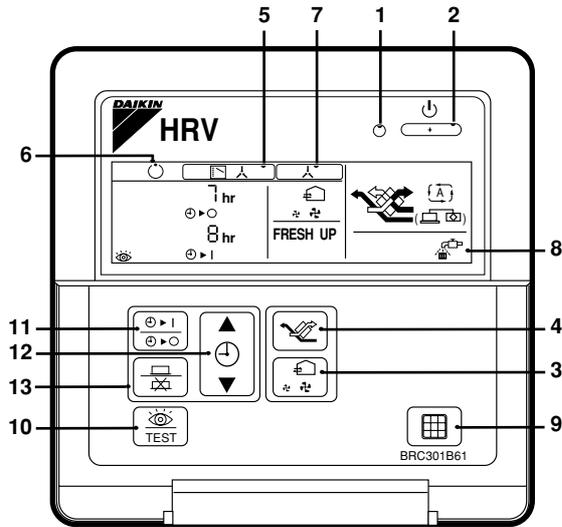


BRC301B61: Remote controller for VRV

1. **Operation lamp**  
This pilot lamp (red) light up while the unit is in Operation.
2. **Operation/Stop button**  
When pushed once, the unit starts operating.  
When pushed twice, the unit stops.
3. **Air flow rate changeover button**  
Air flow rate can be changed over to "  [Low] mode or "  [High] mode,  
"  FRESH UP" [Low FRESH UP] mode,  
"  FRESH UP" [High FRESH UP] mode.  
For "FRESH UP" operation  
When this indication does not show: The volume of outdoor air supplied into the room and that of the room air exhausted outdoors is equivalent.  
For "FRESH UP" operation
  - If it is set to "Fresh up air supply": The volume of outdoor air supplied into the room is larger than that of room air exhausted outdoors. (This operation prevents the odour and moisture from kitchens and toilets from flowing into the rooms.)
  - If it is set to "Fresh up air exhaust": The volume of room air exhausted outdoors is larger than that of outdoor air supplied into the room. (This operation prevents the hospital odour and floating bacteria from flowing out to the corridors.)
4. **Ventilation mode changeover button**  
"  " (Automatic) mode.  
The temperature sensor of the unit automatically changes the ventilation of the unit in [Bypass] mode and [Heat Exchange] mode.  
"  " (Heat Exchange) mode.  
In this mode, the air passes through the heat exchanger element to effect [Total Heat Exchanging] ventilation.  
"  " (Bypass) mode.  
In this mode, the air does not pass through the heat exchange element but by passes it to effect [Bypass] ventilation.

5. **Indication of operation control method:**   
When the operation of HRVs is linked with the air conditioners, this indication may be shown.  
While the indication is shown, the ON/OFF of HRVs cannot be operated by the HRV remote controller.
6. **Indication of operation standby:**   
It indicates the precooling/preheating operation. This unit is at stop and will start operation after the precooling/preheating operation is over.  
Precooling/preheating operation means the operation of HRVs is delayed during the startup operation of linked air conditioners such a before the office hours.  
During this period the cooling or heating load is reduced to bring the room temperature to the set temperature in a short time.
7. **Indication of centralized control:**   
When a remote controller for air conditioners or devices for centralized control are connected to the HRVs, this indication may show.  
During this indication appears on the display, the ON/OFF and timer operation may not be possible with the HRV remote controllers.
8. **Indication of air filter cleaning**  
When the indication "  " appears on the display, clean the filter.
9. **Filter signal reset button**
10. **Inspection button**  
This button is to be used only for service. It is not to be used normally.


### How to operate with timer

11. Push the button "  " and select either one of "  " or "  ".  
Each time the button is pushed, the indication changes as shown below.

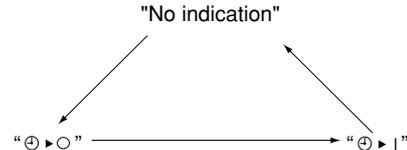

12. Push the button "  " and set the time.  
Each time when "  " is pushed, the time advances one hour.  
Each time when "  " is pushed, the time goes back one hour.
13. Push the button "  "  
Then, the reservation is finished.  
Either "  " or "  " changes from flashing to lighting.  
After the reservation is finished, the remaining time is indicated in the display.  
For cancelling the timer operation, push the button "  " once again.  
The indication disappears.


## Operating the HRV unit using the remote controller of the VRV-system air conditioner

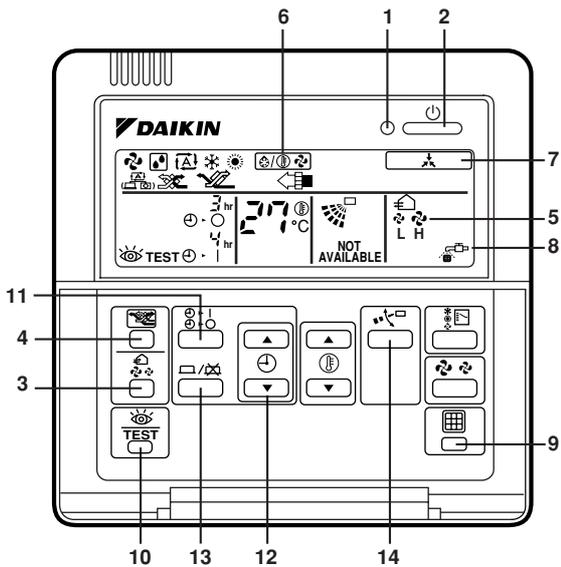

BRC1C51, 61, 517: Remote controller for VRV

- 1 Operation lamp
- 2 Operation/stop button
- 3 Air flow rate changeover button
- 4 Ventilation mode changeover button
- 5 Indication of air flow rate
- 6 Indication of operation control method
- 7 Indication of centralized control
- 8 Indication of air filter cleaning
- 9 Filter signal reset button
- 10 Inspection button
- 11 } See "How to operate with timer" on page 3
- 12 } See "How to operate with timer" on page 3
- 13 } See "How to operate with timer" on page 3
- 14 If you press these buttons when using independent operation of the HRV unit, the message "NOT AVAILABLE" will appear on the display for a few seconds.


When the VRV-system air conditioner is connected with the HRV unit with a direct duct, the remote controller of the air conditioner cannot be used to select the VENTILATION mode. To use the HRV unit without operating the air conditioner, set the air conditioner in the FAN VENTILATION mode and select the low fan speed.

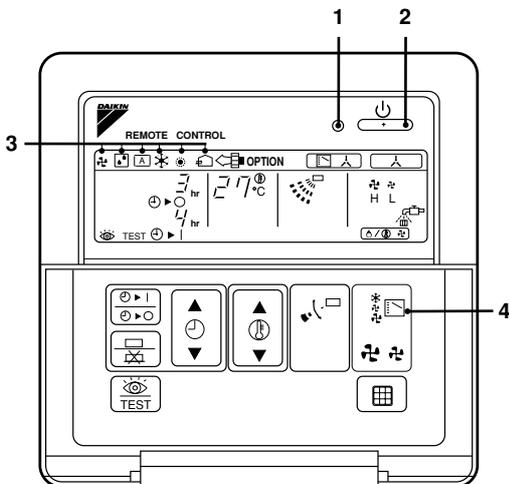

- 1 Operation lamp
- 2 Operation/stop button
- 3 Operation mode display
- 4 Operation mode selector

- Every time the operation mode selector is pressed, the operation mode display changes as shown below.

### Example

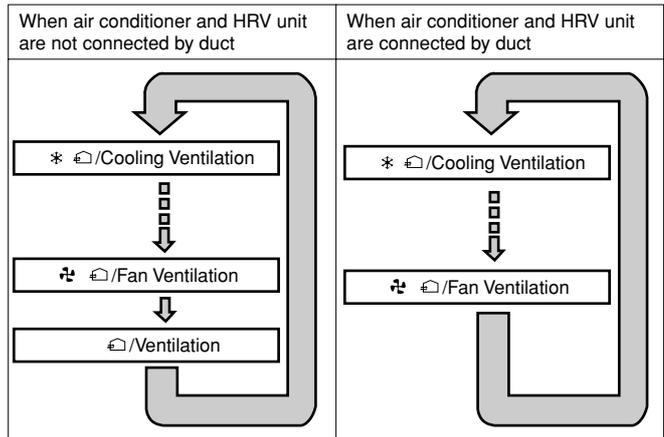

- When the "FILTER" indication appears on the display, clean the filter of the HRV unit. (Refer to the section "Maintenance" on page 5)

### Independent operation of the HRV unit using the Centralized controller (DCS302B61)

- After selecting the zone where the only the HRV unit operation is desired, press the operation mode selector and select " " VENTILATION. The HRV unit can then be operated independently from the air conditioner.
- When the "FILTER" indication appears on the display, clean the filter of the HRV unit. (Refer to the section "Maintenance" on page 5)

## MAINTENANCE

### (FOR A QUALIFIED SERVICE PERSON ONLY)



#### CAUTION

Only a qualified service person is allowed to perform maintenance.

During operation, never check or clean the HRV. It may cause electrical shock and it is very dangerous to touch the rotating part.

Be sure to turn off the OPERATION switch and disconnect the power.

---

#### Maintenance for the air filter

---

##### Cleaning frequency

**At least once every two years (for general office use)  
(clean the element more frequently if necessary.)**

- 1 Go into ceiling through the inspection hole, remove binding metal of maintenance cover and take it off. (Refer to [figure 2](#))
  - 1 Maintenance cover
  - 2 Binding metal
  - 3 Hanging metal
- 2 Take out the heat exchange elements from the unit body. (Refer to [figure 3](#))
  - 1 Heat exchange element
  - 2 Handle
  - 3 Rail
  - 4 Filter
- 3 To clean the air filter, lightly pat it with hand or remove dust with a vacuum cleaner. If excessively dirty, wash it in water. (Refer to [figure 4](#))
- 4 If the air filter is washed, remove water completely and allow to dry for 20 to 30 minutes in the shade. When dried completely, install the air filter back in place. (Refer to [figure 5](#))
- 5 Install the maintenance cover securely in place.



#### CAUTION

1. Do not wash the air filter in hot water.
2. Do not dry the air filter over a fire.
3. Do not subject the air filter to direct sunlight.
4. Do not use organic solvent such as gasoline and thinner on the air filter.
5. Be sure to install the air filter after servicing.  
(Missing air filter causes clogged heat exchange element.)  
The air filter is an optional item and the replacement is available.

---

#### Maintenance for the heat exchange element

---

##### Cleaning frequency

**At least once every two years (for general office use)  
(clean the element more frequently if necessary.)**

- 1 Use a vacuum cleaner to remove dust and foreign objects on the surface of the heat exchange element. (Refer to [figure 6](#))
  - Use the vacuum cleaner equipped with a brush on the tip of the suction nozzle.
  - Lightly contact the brush on the surface of the heat exchanging element when cleaning.  
(Do not crush the heat exchange element while cleaning.)
- 2 Install the air filter securely in place.
- 3 Put the heat exchange element on the rail and insert it securely in place.
- 4 Install the maintenance cover securely in place.



#### CAUTION

Never wash the heat exchanger element with water.

---

## TROUBLE AND COUNTERMEASURE

If your unit does not operate properly, check the following items

| Conditions   | Causes   | Corrective actions  |
|--|--|---|
| The unit does not operate at all.                                    | Check if there is a power failure.   | After power has been restored, start operation again.   |
|  | Check if the fuse has blown or breaker has worked.   | Change the fuse or set the breaker.   |
|  | Check if the indication of operation control method on remote controller (BRC301B61) is shown. | This is normal. Operate the unit using the air conditioner remote control or centralized controller. (Refer to "Operation" on page 2)   |
|  | Check if the indication of operation stand by on remote controller (BRC301B61) is shown.       | It indicates the precooling/preheating operation. This unit is at stop and will start operation after the precooling/preheating operation is over. (Refer to "Operation" on page 2) |
| Amount of discharged air is small and the discharging sound is high. | Check if the air filter and heat exchange element are clogged.                                 | Refer to "Maintenance" on page 5.   |
| Amount of discharged air is large and so is the sound.               | Check if the air filter and heat exchange element are installed.                               | Refer to "Maintenance" on page 5.   |

If the following occurs, consult your dealer where the unit was purchased

List of malfunction codes of Remote controller of the HRV-system air conditioner



| Operation lamp | Inspection indicator | Unit No. | Malfunction code | Description   |
|----------------|----------------------|----------|------------------|---|
| On             | Off                  | Blinking | <b>64</b>        | Indoor air thermistor malfunction   |
| On             | Off                  | Blinking | <b>65</b>        | Outdoor air thermistor malfunction  |
| On             | Off                  | Blinking | <b>6A</b>        | Dumper-related malfunction  |
| Blinking       | Blinking             | Blinking | <b>6A</b>        | Dumper-related malfunction + thermistor                                     |
| Blinking       | Blinking             | Blinking | U5               | Transmission error between the unit and remote controller                   |
| Off            | Blinking             | Off      | U5               | Printed circuit board error or setting error of remote controller           |
| Off            | Blinking             | Off      | U8               | Transmission error between main remote controller and sub remote controller |
| Off            | Blinking             | Blinking | UA               | Faulty installation setting   |
| On             | Blinking             | On       | <b>UC</b>        | Repeated central address  |
| Blinking       | Blinking             | Blinking | UE               | Transmission error between the unit and centralized controller              |

**64** In case of the malfunction with the code in white letters on the black background in the unit still operates. However, be sure to have it inspected and repaired and as soon as possible.



## DISPOSAL REQUIREMENTS

Dismantling of the unit must be done in accordance with relevant local and national regulations.



# NOTES

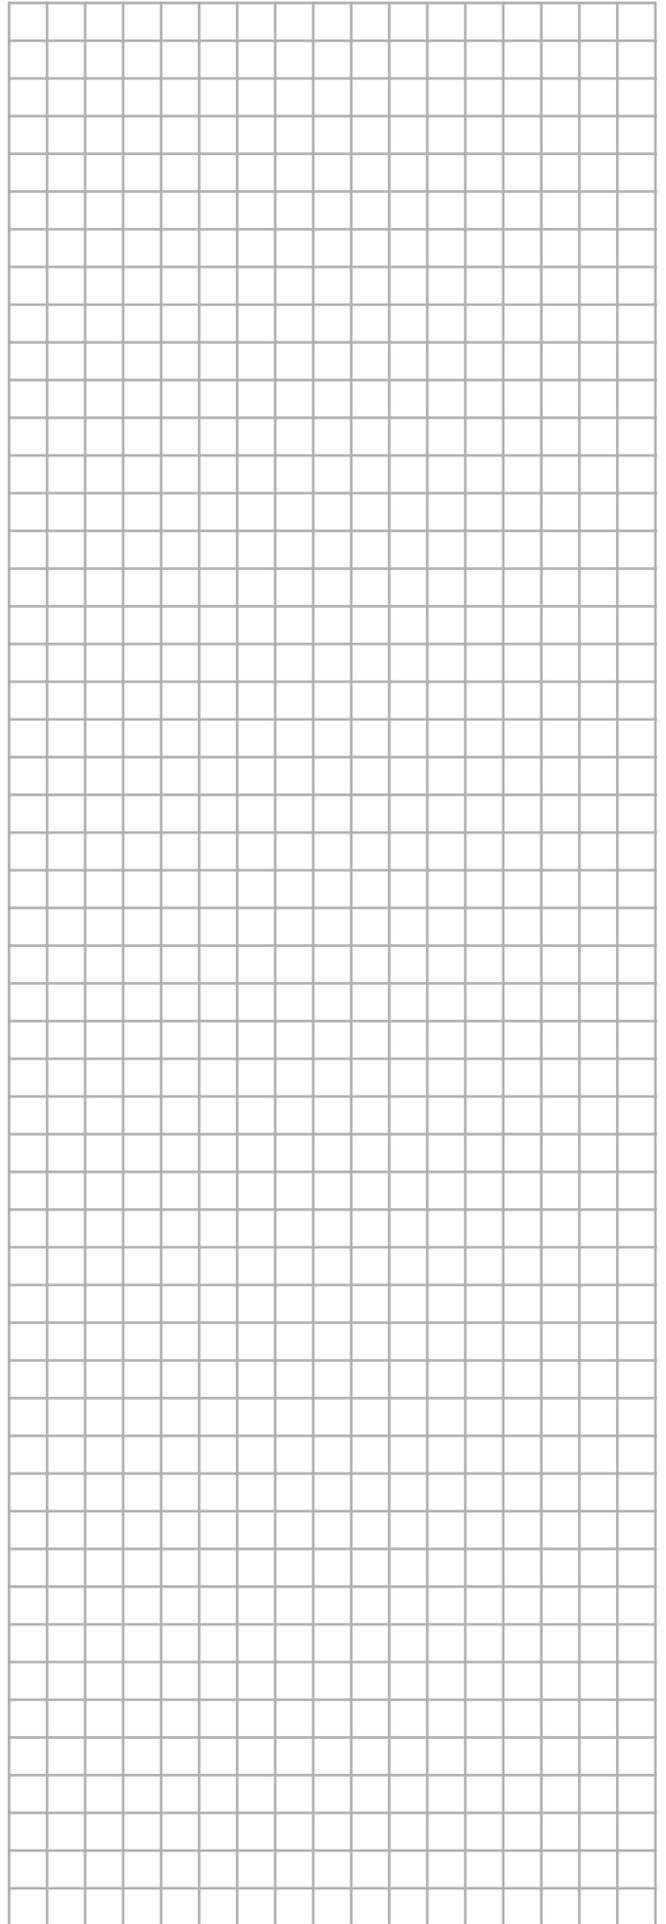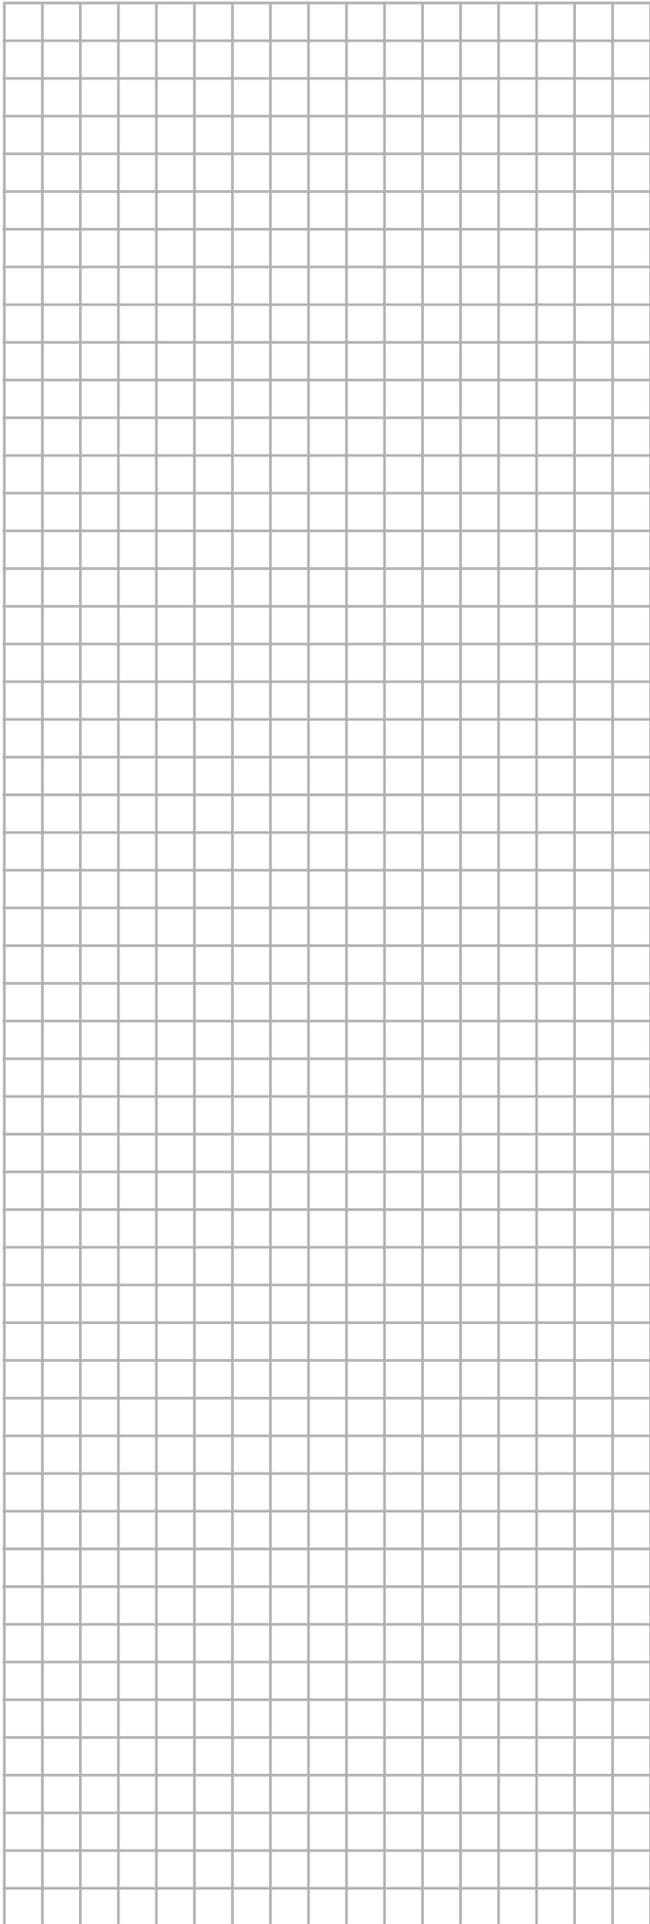

# NOTES

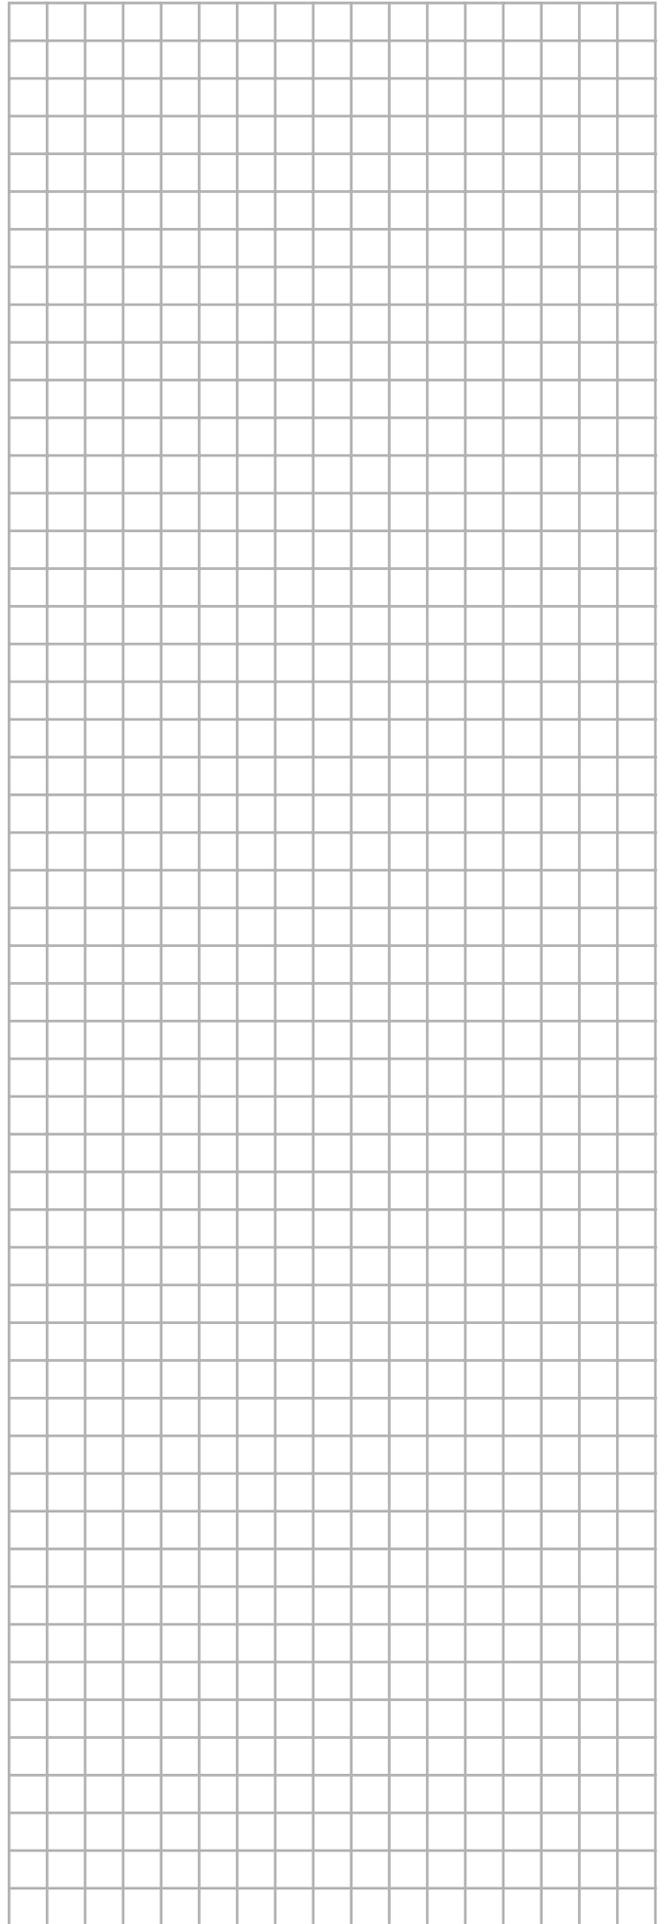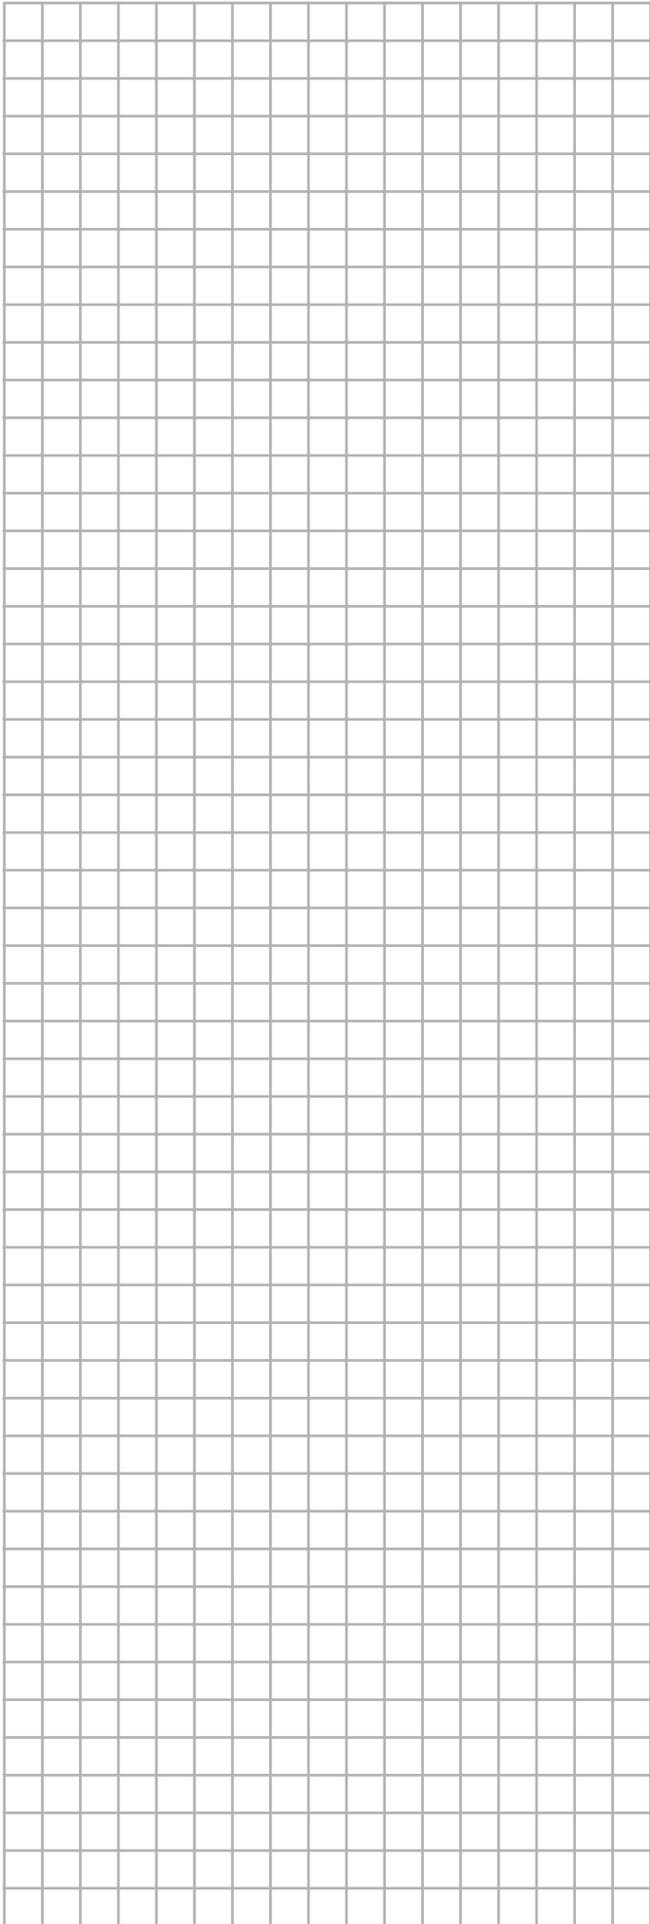

# NOTES

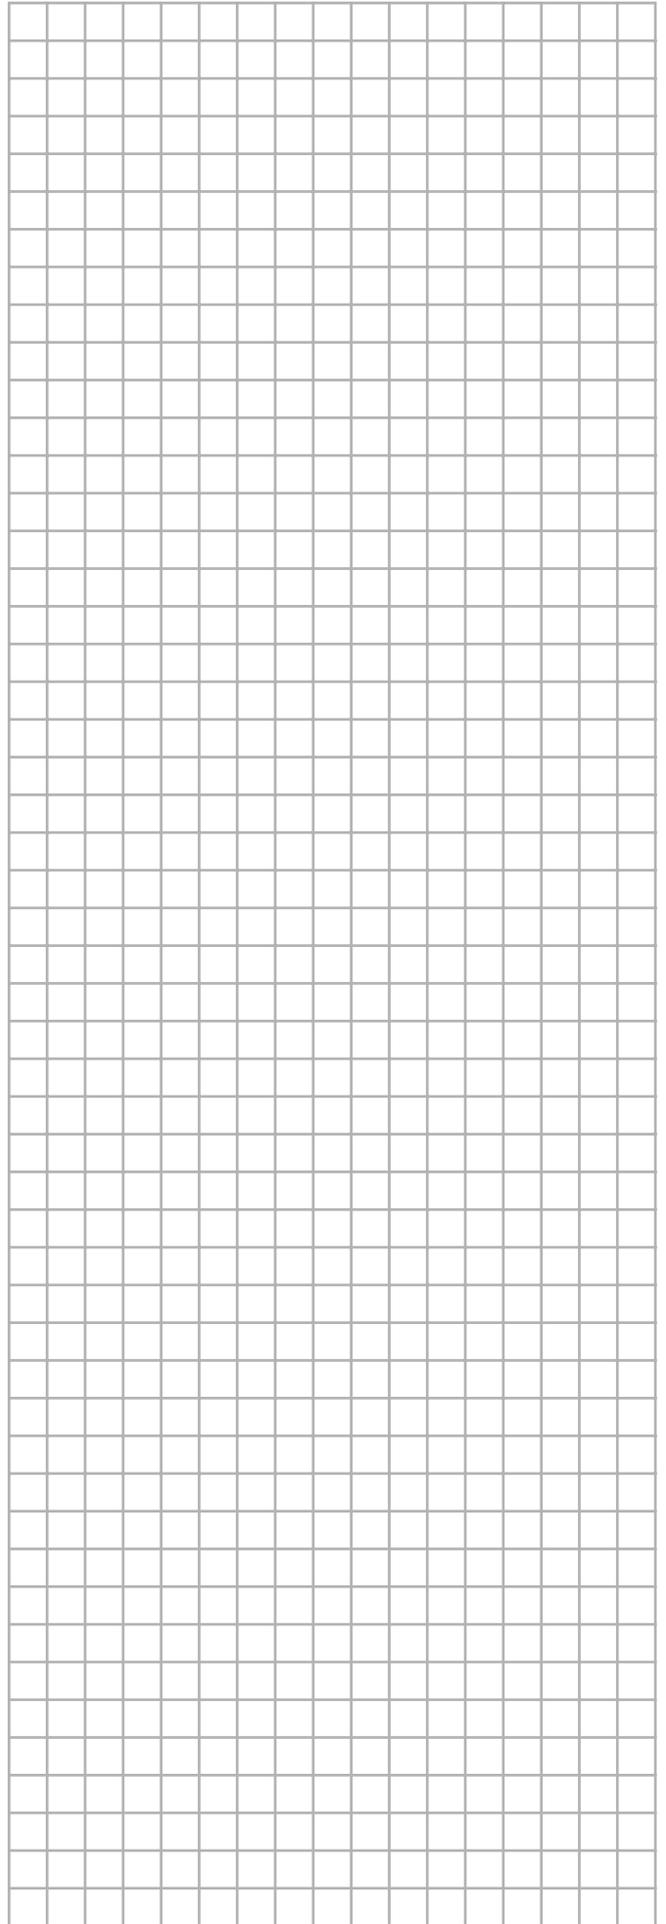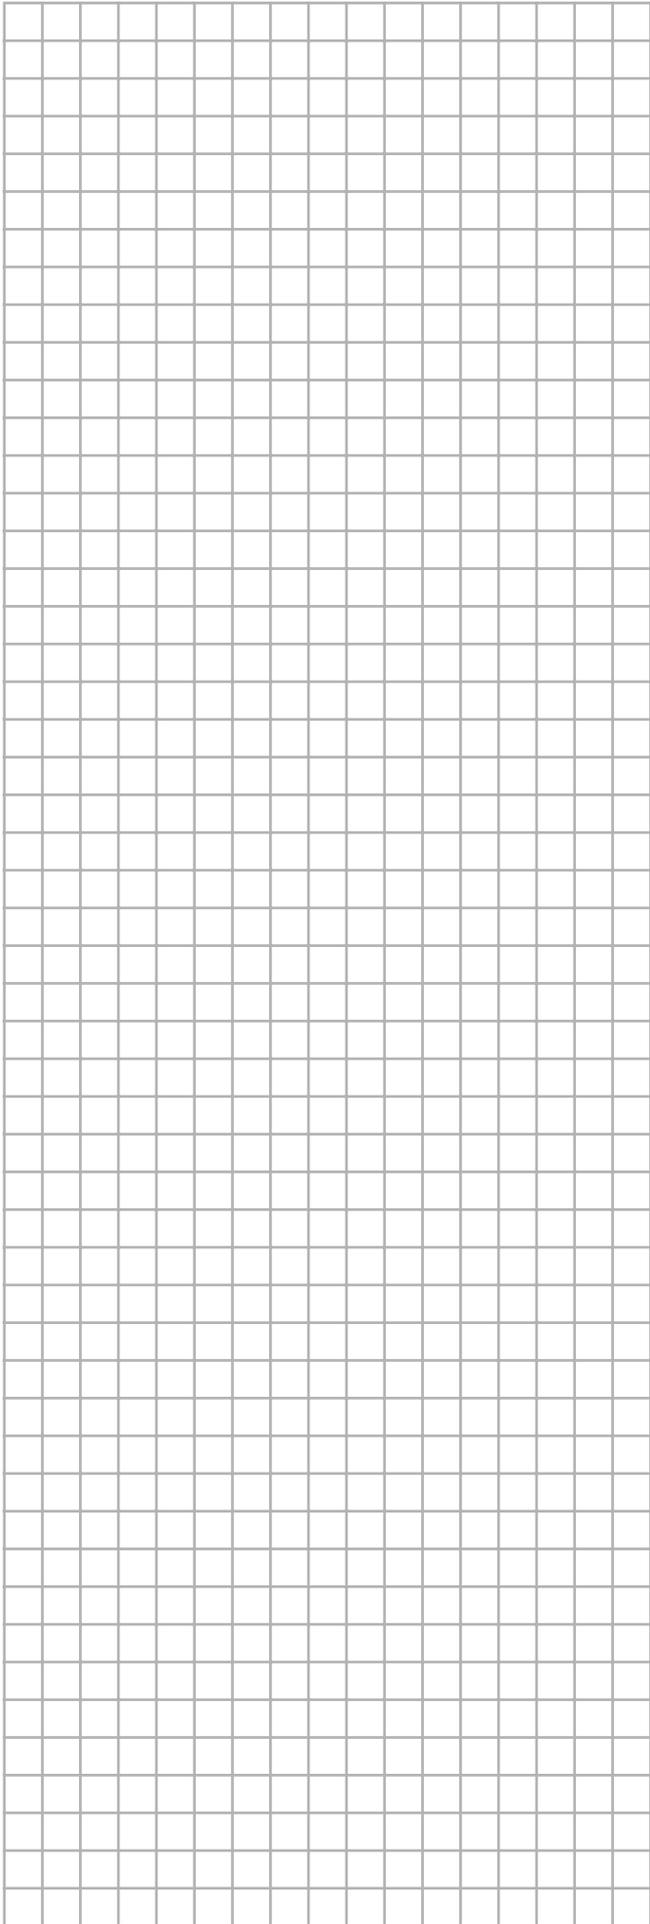

**EAC**

Copyright 2015 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P415944-1 2015.08