FWN-AT/AF

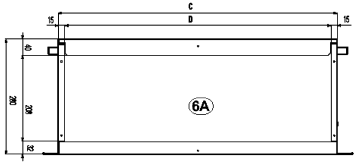

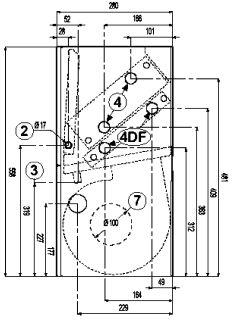

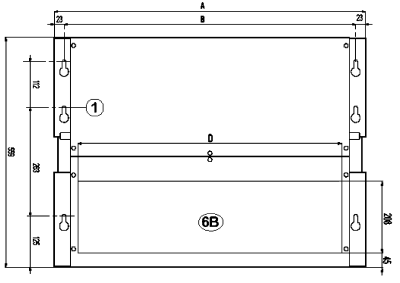

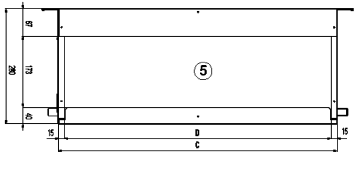

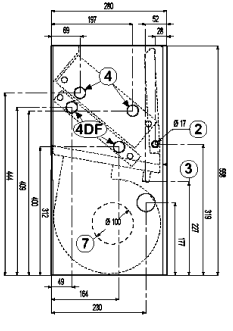

Hydraulic connections
Standard and additional heat exchanger: connection Male

FWN04	FWN05	FWN06	FWN07	FWN08	FWN10
3/4"	3/4"	3/4"	3/4"	3/4"	3/4"

	A	B	C	D
FWN04 05	754	707	676	646
FWN06 07	964	917	886	856
FWN08 10	1174	1127	1096	1056

Legend

1 6 fast-coupling slots
2 Condensate discharge - Horizontal installation
3 Condensate discharge - Vertical installation
4 Hydraulic connections
4 = standard heat exchanger
4 DF = supplementary heat exchanger
5 Air delivery
6 Air intake
6A = supply terms
6B = changeable during installation
7 Round pre-sheared element (⌀ 100 mm) for fresh air intake