FXFQ-B

Notes

1. Location of nameplate
   The unit nameplate is located on the control box cover.
   The decoration panel nameplate is located on the piping-side panel frame, under the corner cover.
2. When installing optional accessories, refer to their respective documentation.
3. Make sure the distance between the ceiling and the cassette does not exceed ·35·mm.
   The maximum ceiling opening is ·910·mm.
4. When the conditions in the ceiling exceed 30°C ambient temperature and 80% relative humidity, or when fresh air is inducted into the ceiling, additional insulation is required (polyethylene foam, thickness ≥·10·mm).
5. When installing a sensor kit, there will be a sensor on this location. For details, see the drawing of the sensor kit.

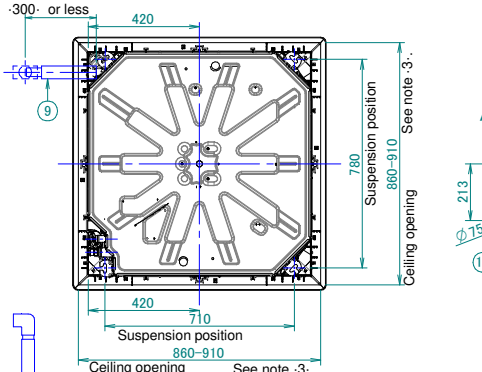

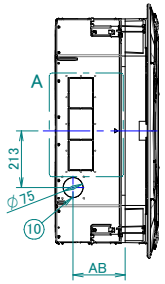

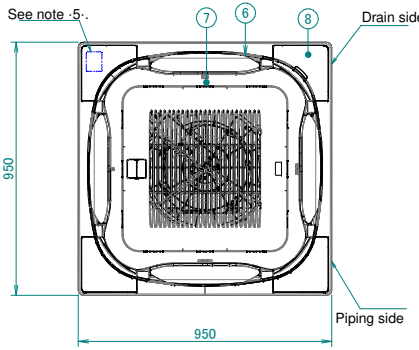

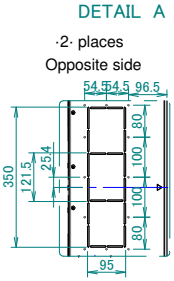

FCAG100/125/140BVEB
FCAHG71/100/125/140HVEB
FXFQ80/100/125BVEB

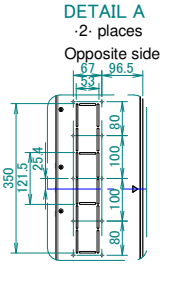

FCAG35/50/60/71BVEB
FXFQ20/25/32/40/50/63BVEB

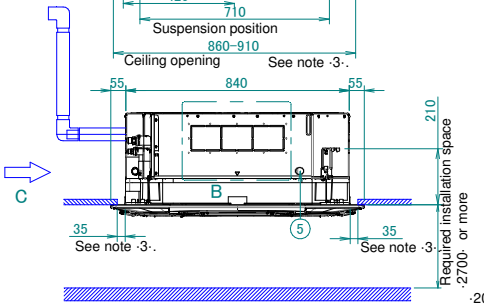

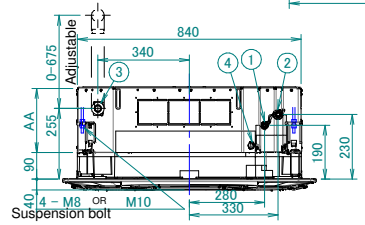

ARROW VIEW C

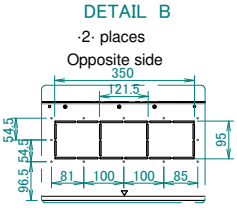

FCAG100/125/140BVEB
FCAHG71/100/125/140HVEB
FXFQ80/100/125BVEB

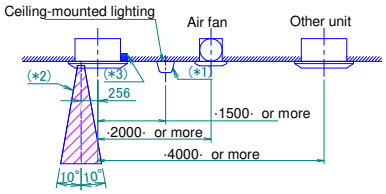

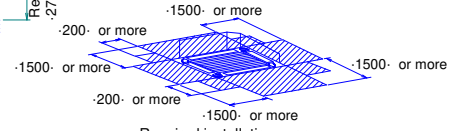

Required installation space

If a discharge outlet is closed up with the "sealing member" option kit, then the required installation space on that (closed up) side is ·500·mm instead of ·1500·mm.

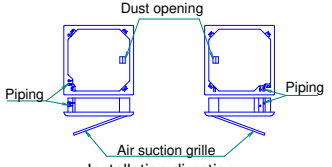

Installation direction

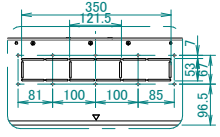

FCAG35/50/60/71BVEB
FXFQ20/25/32/40/50/63BVEB

Item	Name
1	Liquid pipe connection port
2	Gas pipe connection port
3	Drain pipe connection
4	Power supply wiring intake
5	Transmission wiring intake hole
6	Air discharge outlet
7	Air suction grille
8	Corner decoration cover
9	Drain hose
10	Knockout hole.

(*1) Not applicable to recessed lighting.
(*2) Required space for entering with vacuum cleaner tube.
(*3) Make sure the decoration panel discharge outlet is not blocked.

2D121658