


(In case of use attached pipe (Note.3))

Servicing space

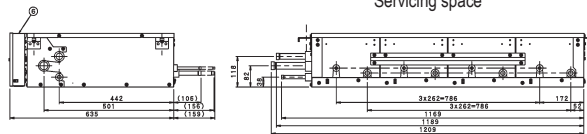

3D064060B

No.	Parts name	Description
1	Suction gas pipe connection port (Note.5,6)	ø 28.6mm brazing connection
2	HP/LP gas pipe connection port (Note.5,6)	ø 19.1mm brazing connection
3	Liquid pipe connection port (Note.5,6)	ø 12.7mm brazing connection
4	Gas pipe connection port	ø 15.9mm brazing connection
5	Liquid pipe connection port	ø 9.5mm brazing connection
6	Electric box (Note.1)	
7	Suspension brackets	M8-M10
8	Grounding terminal	M4
9	Attached pipe (1) (Note.3)	ø 12.7mm brazing connection
10	Attached pipe (2) (Note.3)	ø 6.4mm brazing connection

NOTES

1. Be sure to install an inspection door at electric box side. Another door is necessary to unload the product.
2. Install it at the place where small sound of refrigerant does not disturb. Must not install it at the space such as roof-space of room where person exists.
3. Attached pipe is only used in case of connecting with a 20-50 class indoor unit.
4. Occupy the space with is possible to install field pipes.
5. Reducer may be required (field supply) if joint diameter dose not suit on the triple piping side.
6. Insulators are necessary (field supply) for the triple piping side.
7. This space is a space to keep a top panel when servicing.